

Maintenance Schedule - G7 BeaSt

Years / Hours (whichever is sooner)	0.5 / 1000	1 / 2000	1.5 / 3000	2 / 4000	2.5 / 5000	3 / 6000	3.5 / 7000	4 / 8000	4.5 / 9000	5 / 10000	5.5 / 11000	6 / 12000	6.5 / 13000	7 / 14000	7.5 / 15000	8 / 16000
I = Inspect/Tighten C = Clean																
Outer fan cover screws ²				I				I		I		I		I		I
Internal sun damage behind lens ³		I		I		I		I		I		I		I		I
LED Engine Fans and screws ¹		I + C		I + C		I + C		I + C		I + C		I + C		I + C		I + C
DMX and Power connections				I				I		I		I		I		I
Outer surfaces condition including hardware & gaskets ^{2 4}		I		I		I		I		I		I		I		I
Outer glass	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C	C

Notes

- 1 In rough service environments such as with dust or fog/haze media in the air, inspect fans every 6 months at minimum.
 - 2 Threadlocker must be used if replacing or re-installing hardware. Consult SGM authorized service center for instructions and further information.
 - 3 If any part is cracked, no matter the size, contact SGM Support
 - 4 Do not install product with lens pointing toward the sun for extended periods. Internal parts can sometimes be subjected to overheating due to magnification of sunlight. Look for discolored or deformed components.
- * G Series luminaires do not require lubrication under normal circumstances. Approved lubricants can be reapplied by an SGM authorized service center.